



Compressed Air Systems



Replacing Pressure Switch

972-352-6304/800-531-9656

**ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY
AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**



Pressure Switch

**BEFORE CHANGING PRESSURE SWITCH MAKE
SURE TANK HAS ZERO PRESSURE AND POWER
IS OFF INJURY CAN OCCUR IF THIS IS NOT DONE**

www.compressed-air-systems.com




Compressed Air Systems



Replacing Pressure Switch


972-352-6304/800-531-9656

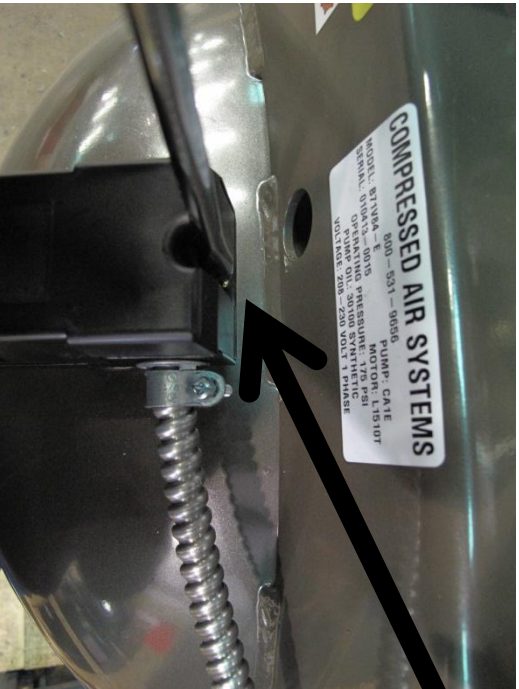

Loosen hold down screw on back side of pressure switch



Remove cover of pressure switch

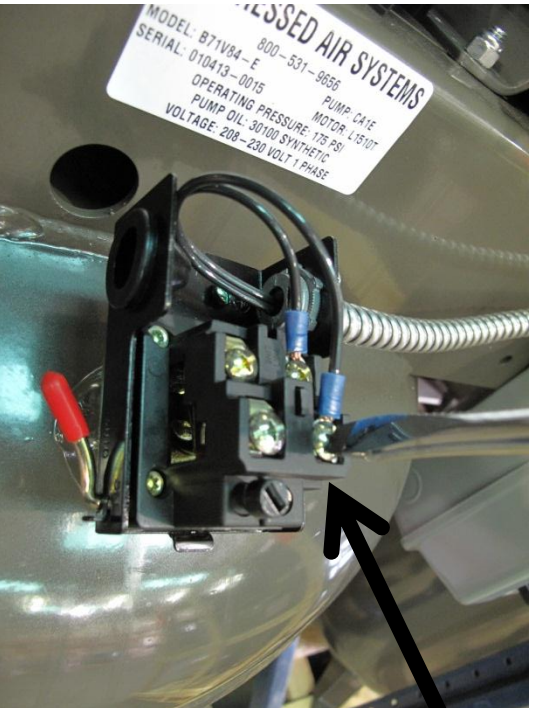

Loosen wire hold down screws

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



Compressed Air Systems




Replacing Pressure Switch

972-352-6304/800-531-9656



Remove wires from pressure switch connections (mark wires to make sure they go back in the correct position)

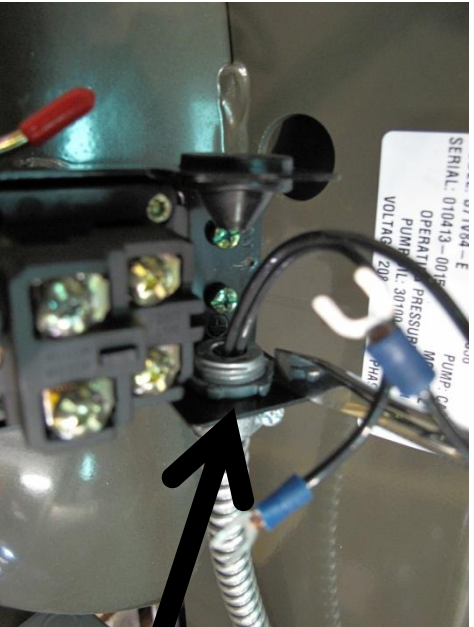

Loosen and remove lock nut on wire conduit



Remove wire and conduit from current pressure switch

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE




Compressed Air Systems



Replacing Pressure Switch

972-352-6304/800-531-9656

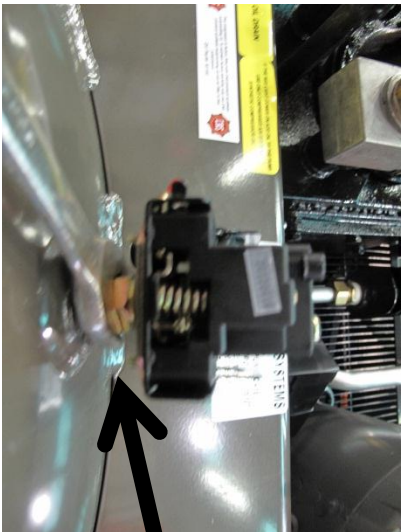

(make sure tank has no pressure inside) Remove current pressure switch from tank



Current pressure switch removed from tank



Put thread sealant on new pressure switch and install, put wires back in correct position and test unit for operation



ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE

www.compressed-air-systems.com