




Compressed Air Systems



CAS Rotary Screw Pressure Switch Adjustment


972-352-6304/800-531-9656

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE

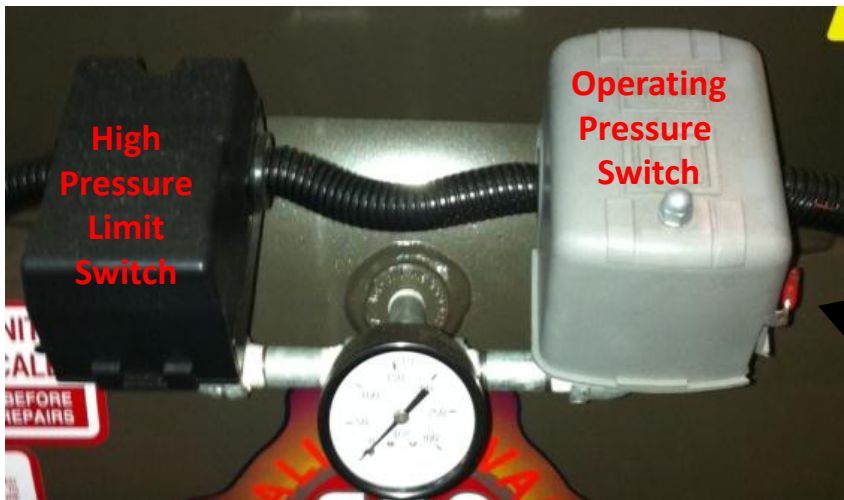

Unload lever

This is the lever to unload the unit prior to shut off. If left in the off position the unit will run unloaded and not compress air

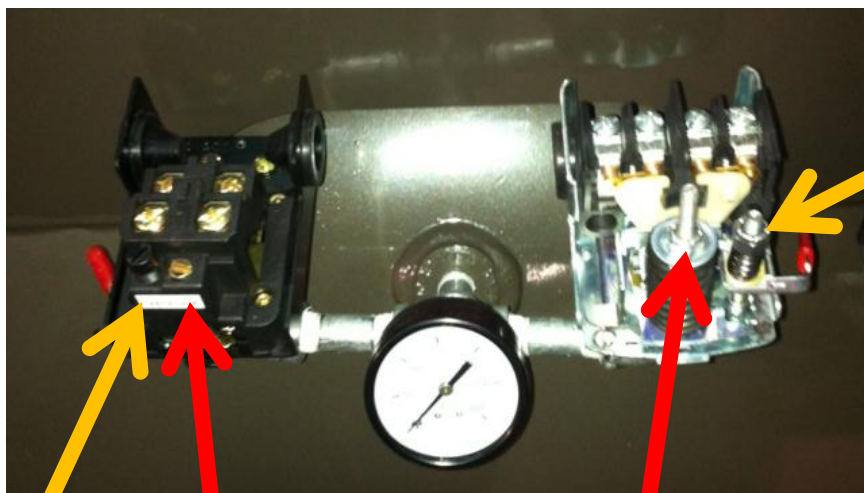

DO NOT ADJUST THIS NUT

DO NOT ADJUST THIS SCREW

To adjust high pressure limit switch only adjust brass screw

To adjust operational pressure switch limit only adjust this nut

Consult factory prior to making any adjustment on the control pressure switches.
The switches are set and tested prior to shipping.

www.compressed-air-systems.com