




# Compressed Air Systems



## Replacing Tank Check Valve

972-352-6304/800-531-9656

**ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY  
AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**

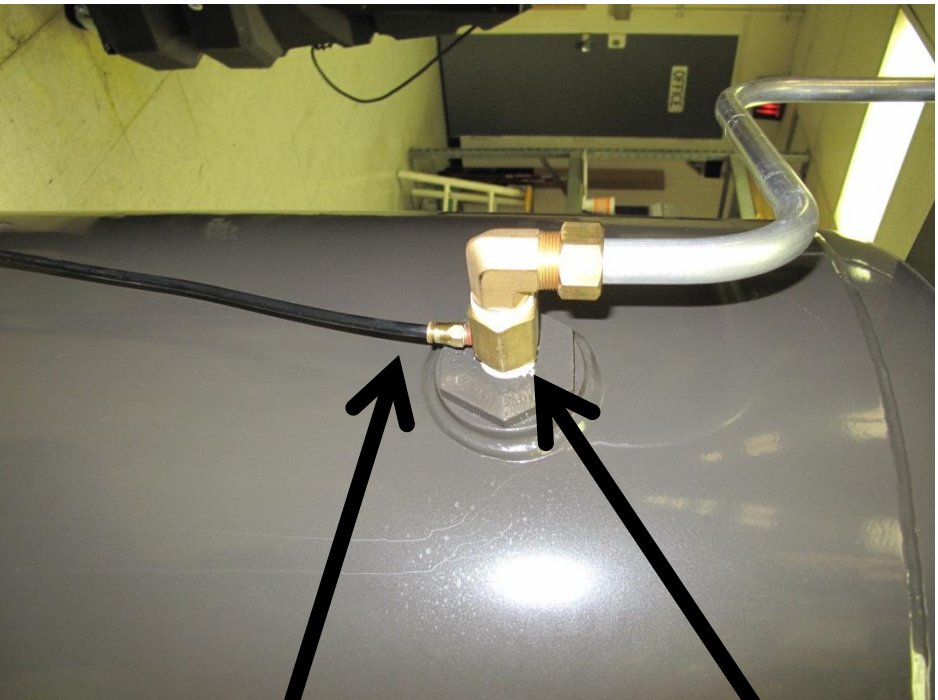

Tank check valve

If the air compressor has a pneumatic tank drain disconnect the source air line. If the drain is manual or electric skip this step.

### BEFORE REPLACING TANK CHECK VALVE

MAKE SURE THE TANK HAS NO PRESSURE IN

IT. CHECK BY PULLING THE SAFETY VALVES

TO ENSURE ZERO PRESSURE IN TANK. INJURY

CAN OCCUR IF TANK IS PRESSURIZED

[www.compressed-air-systems.com](http://www.compressed-air-systems.com)



# Compressed Air Systems




## Replacing Tank Check Valve

972-352-6304/800-531-9656



Pneumatic auto tank drain line uninstalled. Skip this step if unit does not have pneumatic auto drain

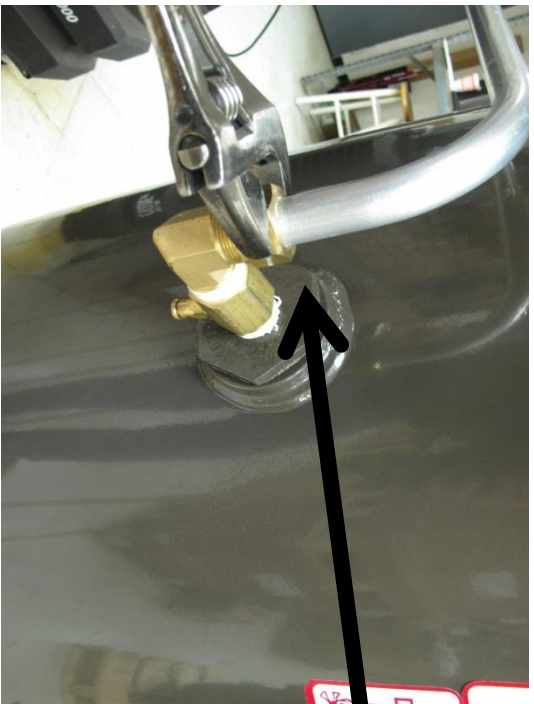

Remove discharge airline from check valve



Discharge air line removed from check valve

**ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**



# Compressed Air Systems



## Replacing Tank Check Valve


972-352-6304/800-531-9656



Verify tank has no pressure in it. Then remove existing check valve from tank



Existing check valve removed from tank

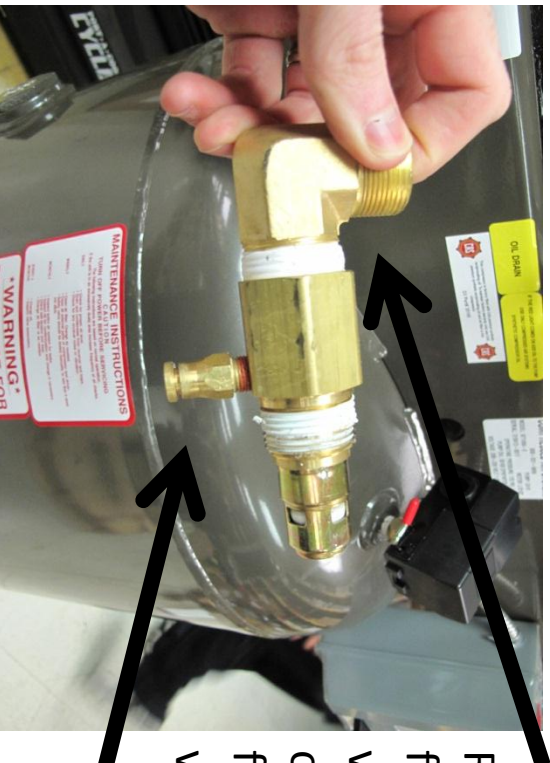

Remove all existing fittings from old check valve. Put thread sealant on fittings and Re-install fittings into new check valve

**ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**






# Compressed Air Systems

## Replacing Tank Check Valve

972-352-6304/800-531-9656



Put thread sealant on  
new check valve and  
install into tank

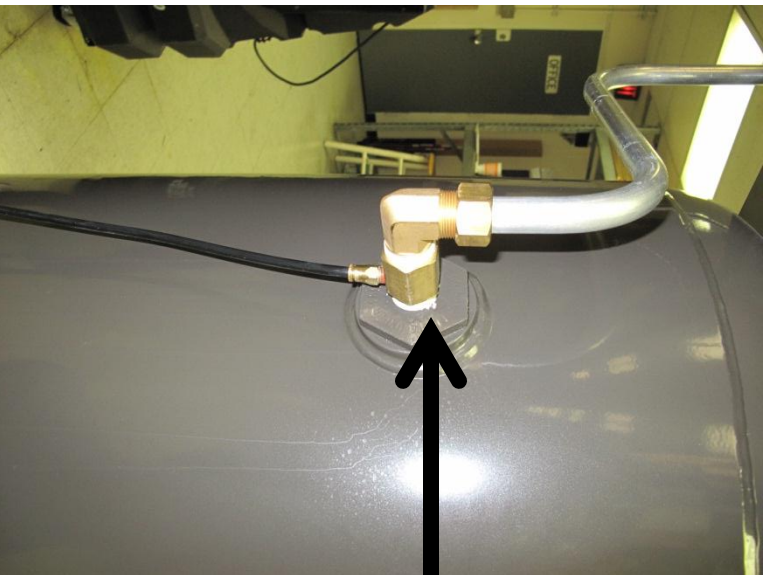

New check valve installed  
with discharge line.  
(Pneumatic auto tank  
drain line installed if  
applicable)

**ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY  
AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**